


取扱説明書 [取付要領書] Operating Instructions[Installation] 足踏ペダルユニット Foot Pedal Unit

品番 /Model No. YG-501UF

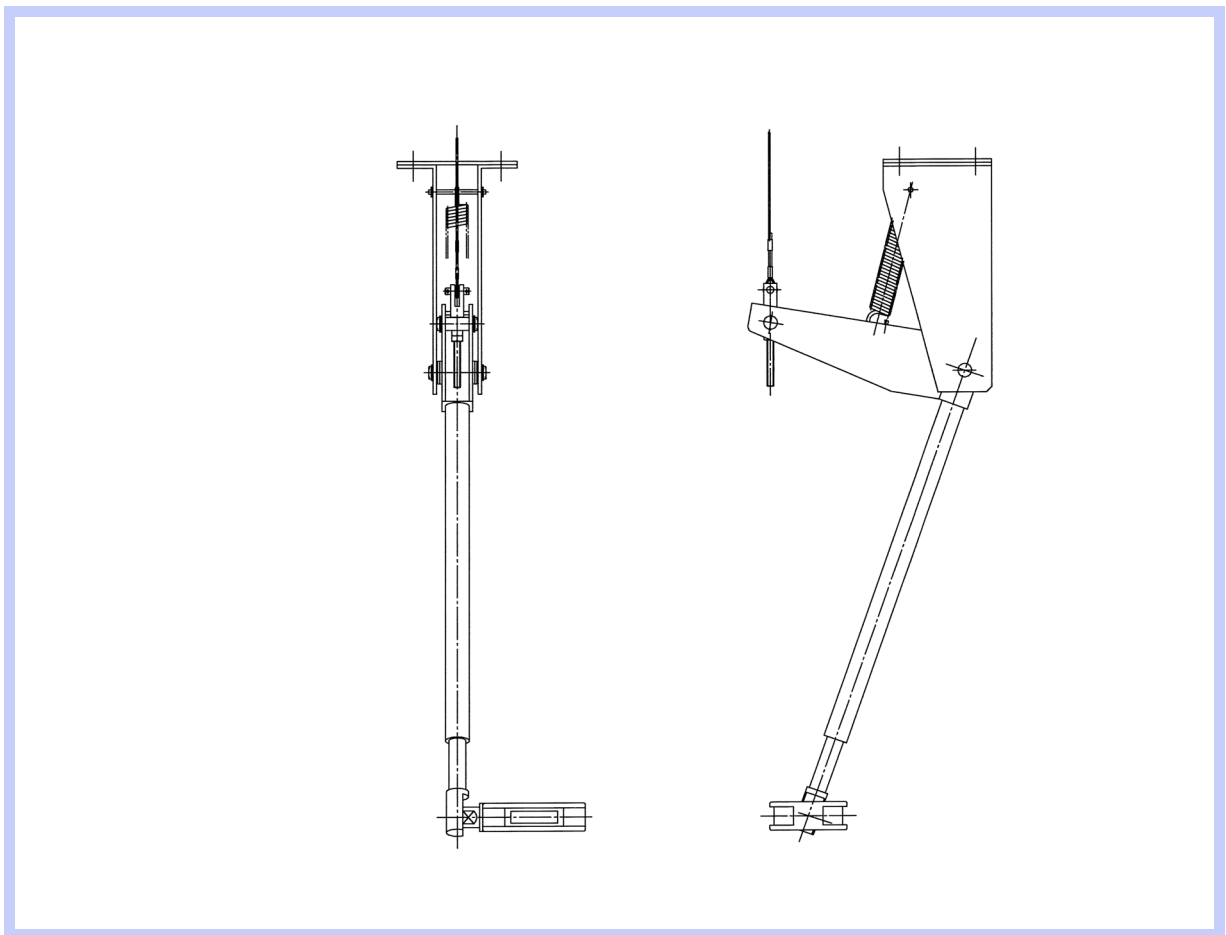


このたびは、パナソニック製品をお買い上げいただき、まことにありがとうございます。

- ◆ 取扱説明書をよくお読みのうえ、正しく安全にお使いください。
周辺機器の取扱説明書も、あわせてお読みください。
- ◆ この取扱説明書は大切に保管してください。
- ◆ Before operating this product, please read the instructions carefully and save this manual for future use. Please also read the operating instructions of peripheral equipment.

◆ 組み立て、取り付け / Installation

- (1) テーブルに穴加工を実施し、アーム取付ベースを取り付けます。(テーブル加工寸法図参照)
- (2) 戻しバネをアーム取付ベースに取り付けます。
- (3) スナップピン (下図参照) を取り外し、溶接ヘッドの引張りワイヤ先端部の輪に軸を通しスナップピンで止めます。(カラーφ10を貫通して取り付けてください。)

- (1) Perform drilling processing to the table and mount the arm mounting base of the foot pedal to the table.(See perforated hole drawing) (4 M8 bolts)
- (2) Attach the return spring to the arm mounting base.
- (3) Remove the snap pin (see below figure), pass the shaft through the ring at the end of the tension wire of the welding head and retain with snap pin.(Pass the shaft through the 10-diameter collar.)

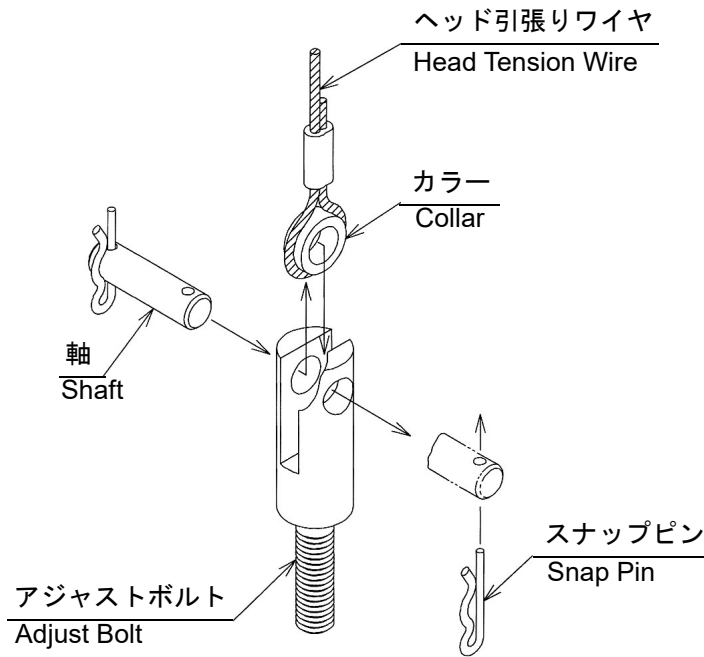

- (4) 連結パイプにペダルを取り付けます。(M6 ボルト) ペダル取付位置によって、長さを±40 mm 調整できます。
- (5) ペダル位置は、アジャストボルトにて、若干調整できます。

- (4) Install the connection pipe to the pedal (M6 bolt). Adjust the length of the connection pipe in accordance with the installed position of the pedal. the adjustable length is ±40mm.
- (5) The pedal position can be adjusted slightly with the adjust bolt.

< 注記 >


- ① 溶接ヘッド (YG-501UH) の取扱説明書も合わせて参照願います。
- ② 足を常時ペダルの上に置く場合は、アジャストボルトを下げてヘッド引張りワイヤに遊びをつけてください。
- ③ ペダルに設定加圧力 (0.04 kN ~ 0.49 kN) よりも過大な力を加えられると、ヘッド引張りワイヤが破断したり機器を損傷することがあります。

< Note >

- ① Refer to the manual of welding head (YG-501UH) together with it.
- ② If you step on the pedal during operation, adjust the adjust bolt when the connection pipe is positioned straight down.
- ③ Applying force larger than the set pressuring force (0.04 kN to 0.49 kN) to the foot pedal can damage the head tension wire or equipment.

品番 /Model: YG-501UF (For YG-501UH)

<テーブル加工寸法 / Table Machining Dimensions >

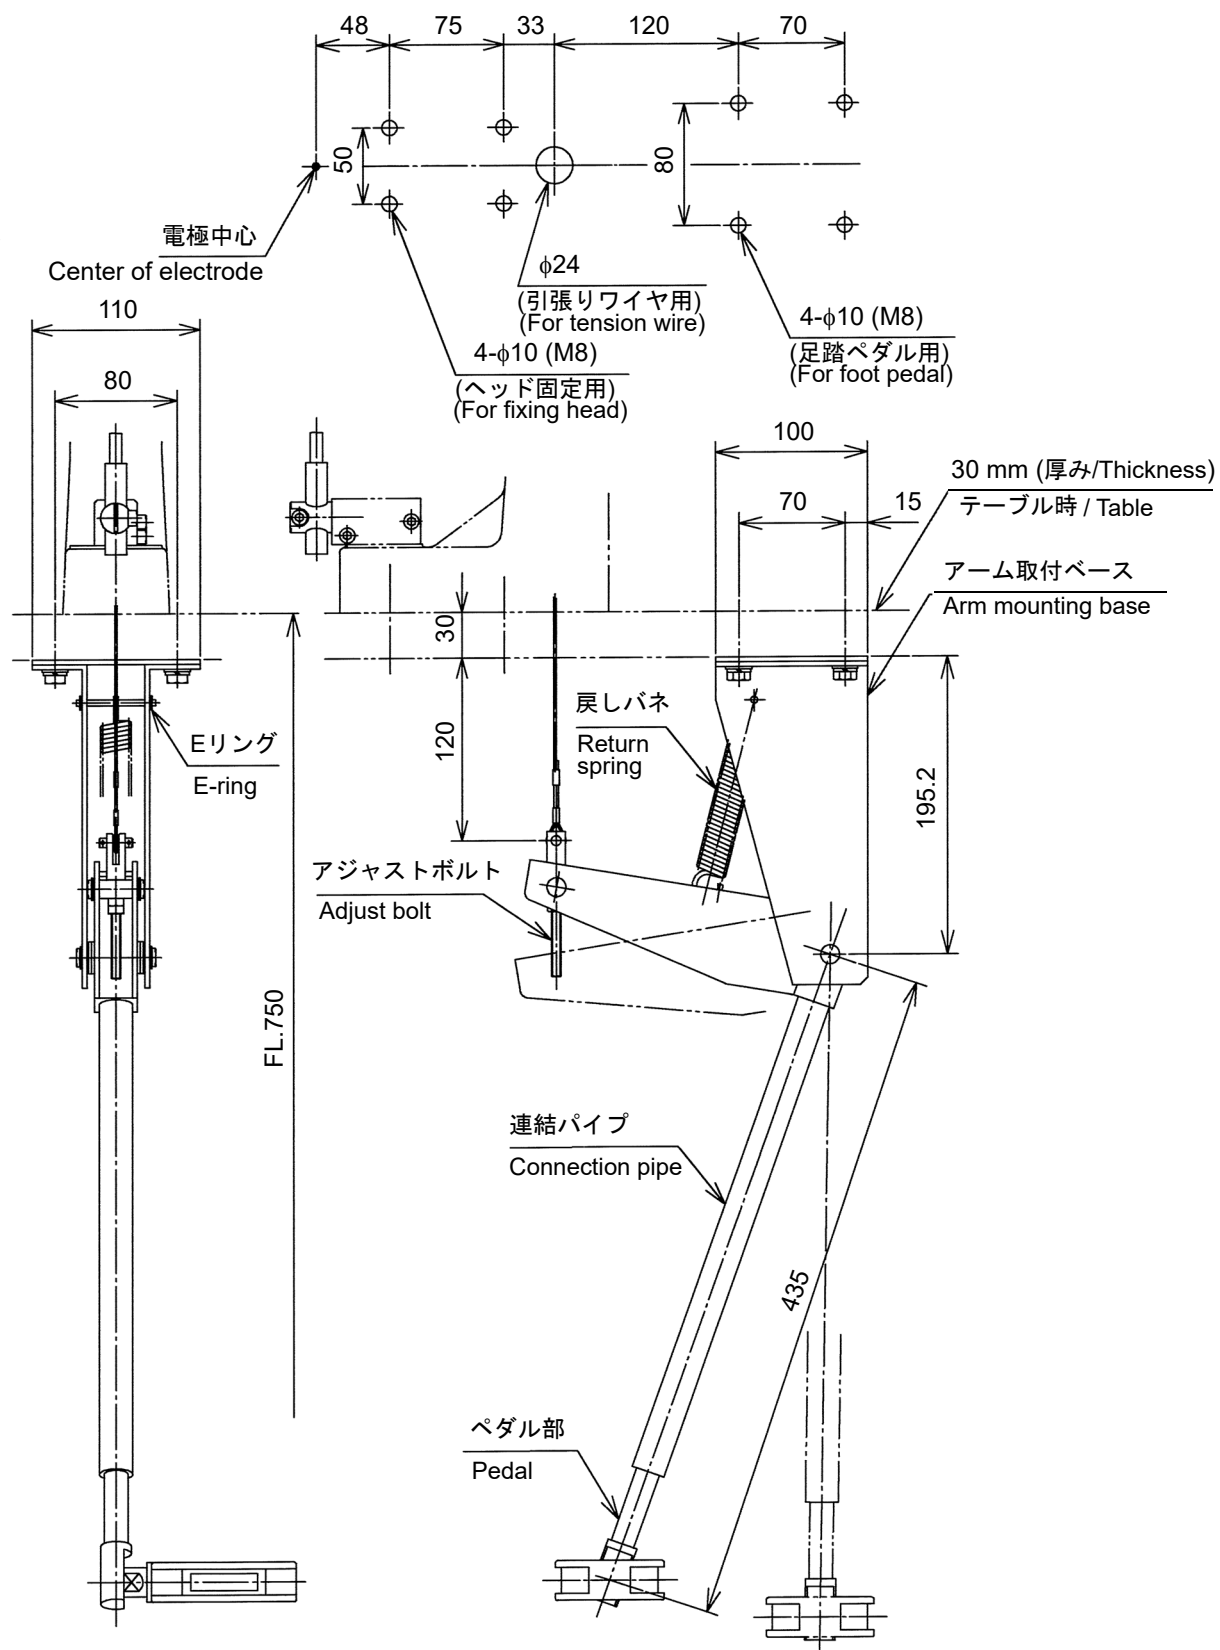

パナソニック コネクト株式会社
〒561-0854 大阪府豊中市稲津町3丁目1番1号

Panasonic Connect Co., Ltd.
1-1, 3-chome, Inazu-cho, Toyonaka, Osaka 561-0854, Japan

© Panasonic Connect Co., Ltd. 2009

Printed in Japan

OMGT1411JEAA00