

## KAIROS Support Information (動作確認結果)

### 1. Confirmed product (対象機器)

Vender name	Product name	Software version	Interface
SKAARHOJ	Master Key One V2	Operating System 1.0 System Manager 1.0.1 Reactor 1.0.7 Core-Panasonic-Kairos 0.1.1-pre50	Panasonic KAIROS REST API Panasonic KAIROS Control Protocol

### 2. Test environment (動作確認環境)

Used apparatus (使用機器)


Equipment Name	Model	S/W Version	Remarks
Kairos Core server	AT-KC1000	Ver. 1.4.3	
Kairos Creator	Apple Mac Book Pro 15	Ver. 1.4.3	

Network Switch	NETGEAR GS728TP		RJ45
Network Switch	NVIDIA Mellanox SN2010		SFP


Mac are trademarks of Apple Inc., registered in the U.S. and other countries.

Mac は米国およびその他の国で登録された米 Apple Inc.の商標です。

Test System Diagram (構成図)

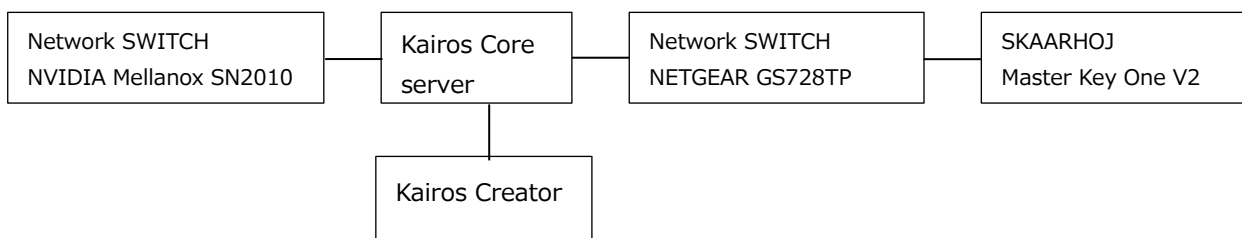

### 3. Test items & results (確認項目と結果)

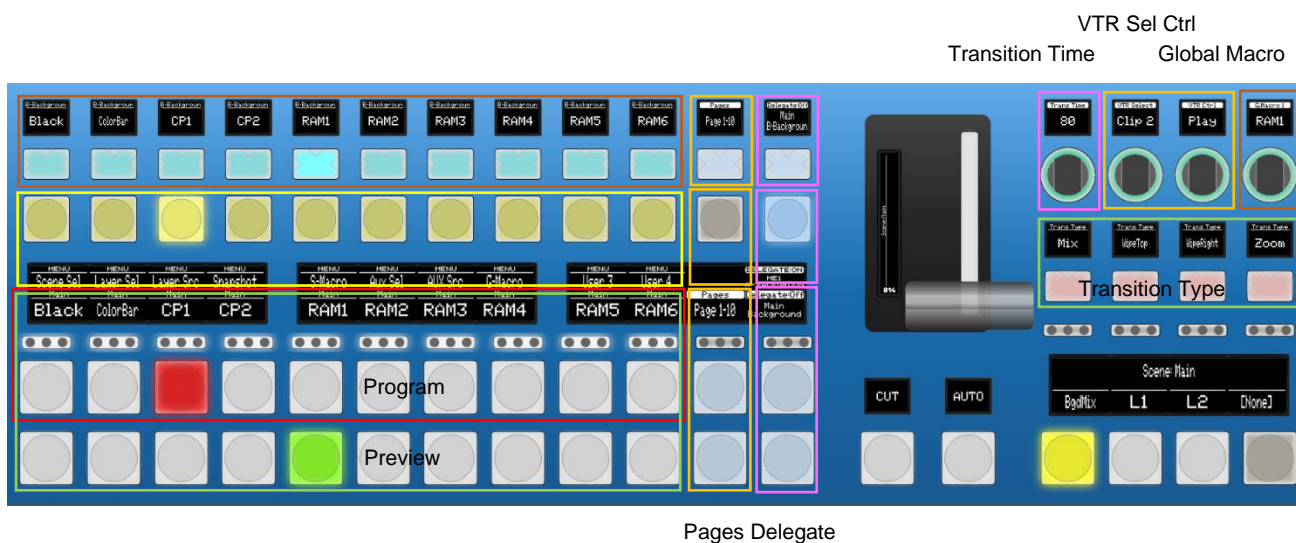

Function	Test Result	Note
Delegate: ON (lower 2 rows)		
Select Scenes	OK	Scenes in sub folders also can be selected.
Select Pages	OK	Page 1-10, 11-20, 21-30, 31-40
Delegate: OFF (lower 2 rows)		
Display and select Sources	OK	Program and Preview
Delegate: ON (each middle and top row)		
Scene Sel	OK	
Layer Sel	OK	
Layer Src	OK	
Snapshot	OK	
S-Macro	OK	
Aux Sel	OK	
AUX Src	OK	
G-Macro	OK	
Delegate: OFF (each middle and top row)		
Select Scene	OK	
Select Layer	OK	
Select Source	OK	
Operate Snapshot	OK	Name of Snapshot of Scene in subfolder is displayed on Master Key One V2 but when pressing its button, Kairos does not operate.
Operate S-Macro	OK	Name of Scene Macro of Scene in subfolder is displayed on Master Key One V2 but when pressing its button, Kairos does not operate.

Select Aux Bus	OK	
Select Aux Source	OK	
Operate Global Macro	OK	

Function	Test Result	Note
Transition		
CUT	OK	
AUTO	OK	
Select Scene	OK	
T-bar	OK	
Transition Type	OK	One of 82 types can be assigned to each button. More information is available on SKAARHOJ web site below: <a href="https://wiki.skaarhoj.com/books/blue-pill-reactor/page/transition-types">https://wiki.skaarhoj.com/books/blue-pill-reactor/page/transition-types</a>
Transition Time	OK	The digit to adjust can be changed by pushing the dial.
Player Control		
VTR Select	OK	Clip 1/2, Ram 1/2/3/4/5/6/7/8
VTR Ctrl	OK	Play/Pause/Begin/End
Global Macro		
G.Macro	OK	

The information on the pages shows test results under specific environment only. The related operations and test results might be changed and are not guaranteed.

注意：掲載される動作確認情報はテスト実施時点での内容であり、すべての環境で動作を保証するものではありません。