

KAIROS Support Information (動作確認結果)

1. Confirmed product (対象機器)

Vender name	Product name	Software version	Interface
SKAARHOJ	Master Key One V2	Operating System 1.0 System Manager 1.0.2-pre8 Reactor 1.1.0-pre3 Core-Panasonic-Kairos 1.0.0	Panasonic KAIROS REST API Panasonic KAIROS Control Protocol

2. Test environment (動作確認環境)

Used apparatus (使用機器)


Equipment Name	Model	S/W Version	Remarks
Kairos Core server	AT-KC200	Ver. 1.5.0	
Kairos Creator	Apple Mac Book Pro 15	Ver. 1.5.0	

Network Switch	NETGEAR GS524UP		RJ45
Network Switch	NVIDIA Mellanox SN2010	Ver. 3.9.3220	SFP


Mac are trademarks of Apple Inc., registered in the U.S. and other countries.

Mac は米国およびその他の国で登録された米 Apple Inc.の商標です。

Test System Diagram (構成図)

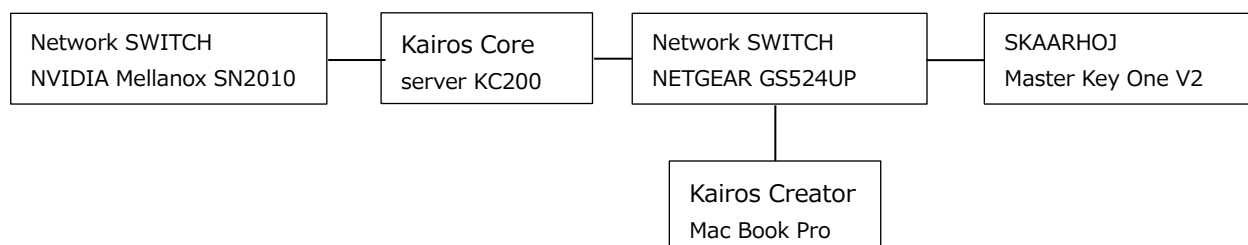

3. Test items & results (確認項目と結果)

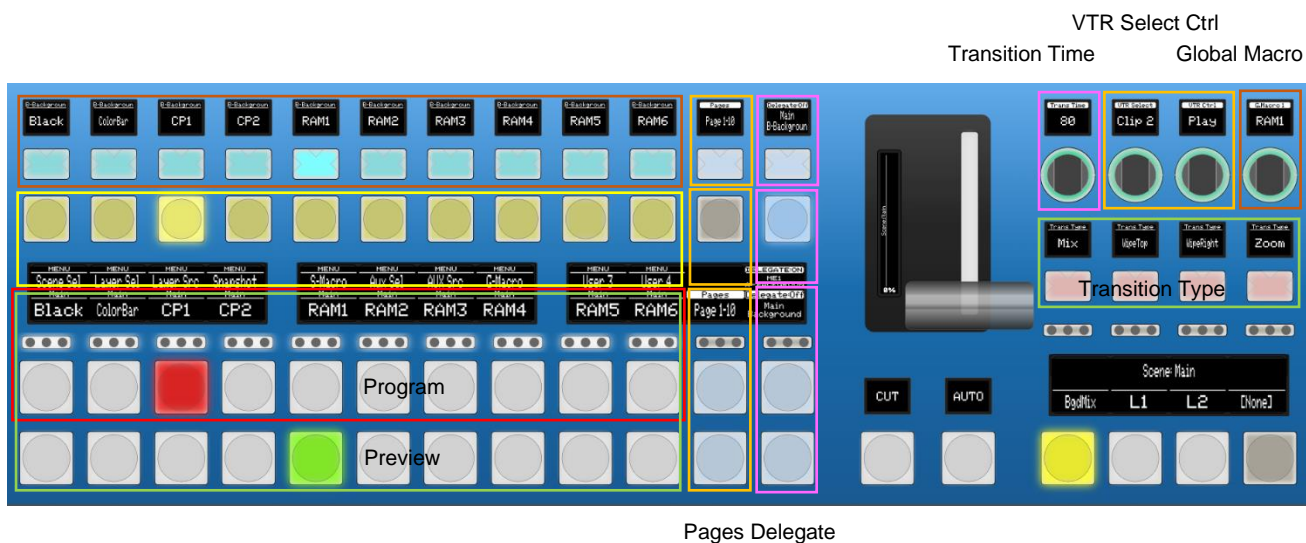

Function	Test Result	Note
Delegate: ON (lower 2 rows)		
Scenes	OK	
Pages	OK	
Delegate: OFF (lower 2 rows)		
Display and select Sources	OK	Program and Preview
Delegate: ON (each middle and top row)		
Scene Select	OK	
Layer Select	OK	
Layer Source	OK	
Snapshot	OK	
Scene Macro	OK	
Global Macro	OK	
Aux Select	OK	
Aux Source	OK	
Auto Scene	OK	
Delegate: OFF, Operation (each middle and top row)		
Scene Select	OK	
Layer Select	OK	
Layer Source	OK	
Snapshot	OK	Please refer to (*1) mentioned below.
Scene Macro	OK	Please refer to (*1) mentioned below.
Global Macro	OK	
Aux Source	OK	
Auto Scene	OK	

Function	Test Result	Note
Transition		
CUT	OK	Please refer to (*1) mentioned below.
AUTO	OK	Please refer to (*1) mentioned below.
Layer Select	OK	
T-bar	OK	
Transition Type	OK	One of 82 types can be assigned to each button. More information is available on SKAARHOJ web site below: https://wiki.skaarhoj.com/books/blue-pill-reactor/page/transition-types
Transition Time	OK	The digit to adjust can be changed by pushing the dial.
Player Control		
VTR Select	OK	Clip 1/2, Ram 1/2/3/4/5/6/7/8
VTR Ctrl	OK	Play/Pause/Begin/End
Global Macro		
Select and run G.Macro	OK	

(*1) : Please note that the name of Scene on Kairos Creator should be unique for proper operations.

適切な動作のため、Scene 名は重複しないようにご注意ください。

The information on the pages shows test results under specific environment only. The related operations and test results might be changed and are not guaranteed.

注意：掲載される動作確認情報はテスト実施時点での内容であり、すべての環境で動作を保証するものではありません。